


PRELUDE

Shower door installation instructions

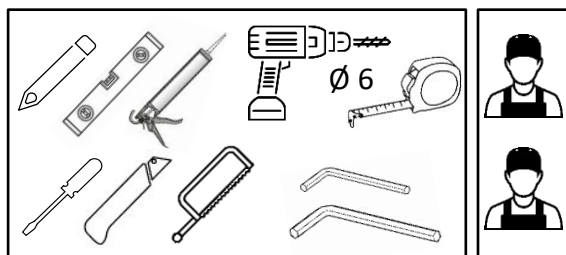

1.		MF-42/8-ER	1
2.		400211PS-013	1
3.		40021PS - 009	1
4.		3,5x35 SK1SET; Ø 6	5
5.		GC-2032	1
6.		MF-43MAGN	1
7.		SC-ALU8X9NEW	1
8.		DR-CH32	1
9.		WGLA6801CP + SK2SET1	2
10.		8 mm Safety Glass	1



A	
700 x 2000	698-703
800 x 2000	798-803
900 x 2000	898-903
1000 x 2000	998-1003

